
NOTES:

- 1. PROVIDE AGENCY APPROVED WYE OR TEE WITH APPROPRIATE DONUT. VERIFY WHETHER CONTRACTOR OR AGENCY IS TO INSTALL THE WYE.
- 2. TAPE WRAP PIPE AS REQUIRED BY SOIL CONDITIONS.
- 3. REMOVE CORE PLUG FROM SEWER MAIN. DO NOT BREAK INTO SEWER MAIN TO MAKE CONNECTION.
- 4. STAINLESS STEEL STRAPS REQUIRED.
- 5. PROVIDE AND PLACE PER APWA SECTION 33 05 20. COMPACT PER APWA SECTION 31 23 26 TO A MODIFIED PROCTOR DENSITY OF 95% OR GREATER. MAXIMUM LIFT THICKNESS IS 8 INCHES BEFORE COMPACTION.
- 6. IN HIGH WATER TABLE BOWL WAX REQUIRED
- 7. SEWER SADDLE PER AGENCY REQUIREMENTS.

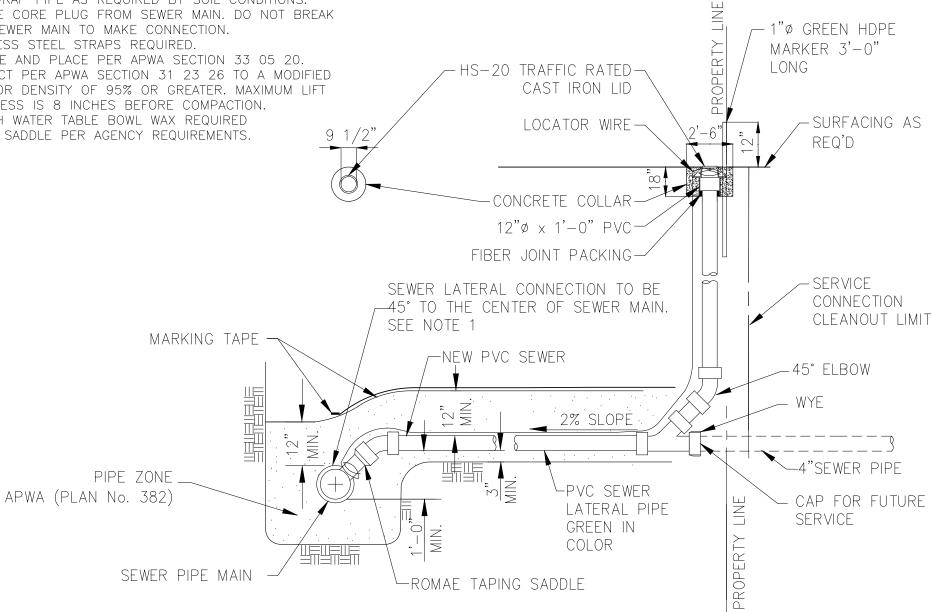

SUNRISE

ENGINEER

HYDE PARK CITY

113 EAST CENTER HYDE PARK. UTAH 84318 TEL: (435) 563-6507

 \mathbf{M} HYDE PARK CITY

SANITARY SEWER LATERAL CONNECTION

DATE:

05-25-22